

## Harmony XPS

Basic & Universal Safety Modules

































### Discover Harmony

Advanced operator interface and industrial relays

Harmony operator interface and industrial relays enhance operational efficiency and equipment availability across industrial and building applications. Harmony includes intelligent connected products and edge terminals that visualize, gather and process data, enabling informed operator decisions

### Explore our offer

- Harmony Push Buttons and Switches
- Harmony HMI Operator Terminals, IPC and EdgeBox
- Harmony Signaling Devices
- Harmony Electrical Relays
- Harmony Safety




# Quick access to product information

#### Get technical information about your product



Each commercial reference presented in a catalog contains a hyperlink. Click on it to obtain the technical information of the product:

- Characteristics, Dimensions and drawings, Mounting and clearance,
   Connections and schemas, Performance curves
- Product image, Instruction sheet, User guide, Product certifications, End of life manual

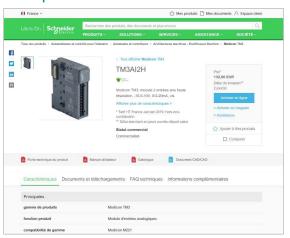

### Find your catalog



- With just 3 clicks, you can access the Industrial Automation and Control catalogs, in both English and French
- > Consult digital automation catalogs at Digi-Cat Online



- Up-to-date catalogs
- Embedded product selectors,360° pictures
- · Optimized search by commercial references

### Select your training



- > Find the right <u>Training</u> for your needs on our Global website
- > Locate the training center with the selector tool, using this link






### General content

Harmony ™ XPS Basic & Universal Safety Modules	
Selection guide	e 2
Selection of safety function	e 4
Basic Safety modules	
■ Type XPSBAC  - Operating principles	
Type XPSBAT  - Operating principles	
Universal Safety modules	
Type XPSUAB  - Operating principles, selection	
Type XPSUAF  - Operating principles	
<ul> <li>Type XPSUAK</li> <li>Operating principles</li></ul>	
Type XPSUAT  - Operating principles	
Type XPSUDN  - Operating principles	12
<ul> <li>Type XPSUS</li> <li>Operating principles, selection</li></ul>	
Type XPSUEP - Operating principles	
Type XPSUVN  - Operating principles	
Accessories for Basic & Universal Safety Modulespage	17
Substitution table page	18
Product reference indexpage	20

2

### **Harmony** XPS Basic & Universal Safety Modules

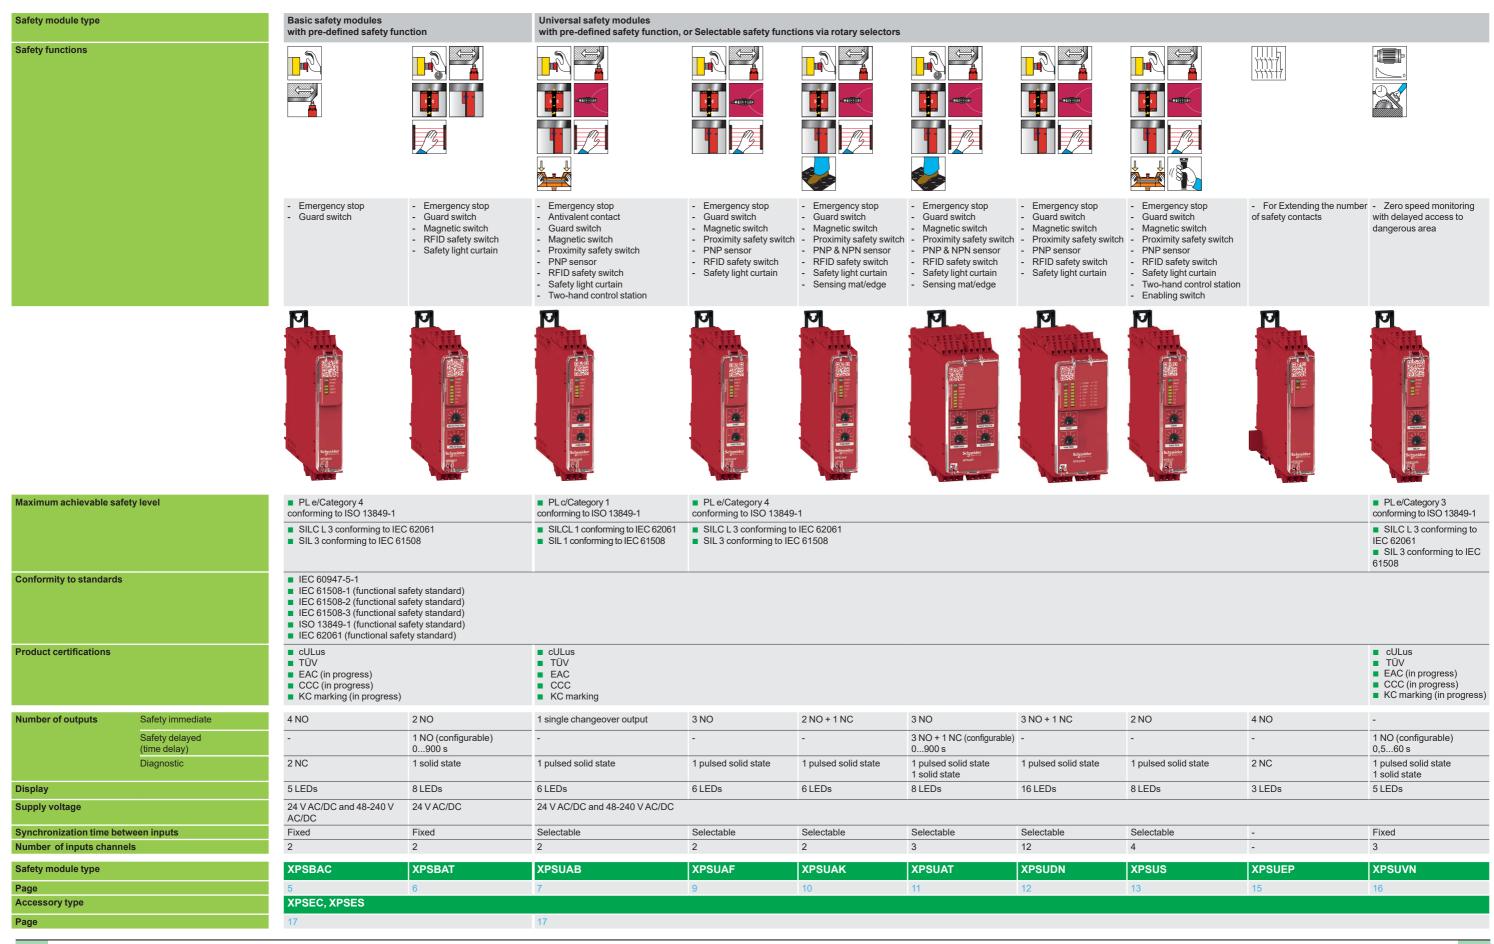

Schneider

#### **Harmony** XPS Basic safety modules

Safety functions: selection of safety modules

This selection table indicates which safety module to select, according to the required safety functions.

			required safety funct	ions.	
Safety functions			Safety modules		
		ISO 13849-1	PL c/Category 1	PL e/Category 3	PL e/Category 4
		IEC 62061	·	SILCL 3	SILC L 3
		IEC 61508	SIL1	SIL 3	SIL 3
Emergency stop	Stop category 0		XPSUAB	-	XPSBAC XPSUAF XPSUAK XPSUDN XPSUS
	Stop category 0+1				XPSBAT XPSUAT
Control of access to hazardous zones	Interlocking guard with and without guard locking		XPSUAB		XPSBAC XPSBAT XPSUAF XPSUAK XPSUAT XPSUDN XPSUS
	Magnetic switch		XPSUAB	-	XPSBAT XPSUAF XPSUAK XPSUAT XPSUDN XPSUS
	RFID safety switch	1	XPSUAB		XPSBAT XPSUAF XPSUAK XPSUAT XPSUDN XPSUS
	Light curtains	Mg.	XPSUAB	-	XPSBAT XPSUAF XPSUAK XPSUAT XPSUDN XPSUS
	Safety mats		-		XPSUAK XPSUAT
Starting and enabling of dangerous movements	Two-hand control station		XPSUAB		XPSUS
	Enabling switch (grip switch)	(8)	-	-	XPSUS
	Proximity safety switch		XPSUAB		XPSUAF XPSUAK XPSUAT XPSUDN XPSUS
Safety monitoring functions	Zero speed detection (remanent voltage)		-	XPSUVN	-
	Safety timer		-	XPSUVN	•
	Increasing the number of safety contacts (1)	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	-	-	XPSUEP

(1) More information in the page 16.

#### **Harmony** XPS

#### Basic safety modules

Type XPSBAC For E-stop and Guard switch





#### **Operating principle**

**XPSBAC** safety modules are used for monitoring Emergency stop circuits conforming to standards EN/ISO 13850 and EN/IEC 60204-1 and also meet the safety requirements for the electrical monitoring of switches in protective devices conforming to standard EN/ISO 14119.

- They provide protection for both the machine operator and the machine by immediately stopping the dangerous movement on receipt of a stop instruction from the operator, or on detection of a fault in the safety circuit itself.
- XPSBAC module have 4 NO safety outputs and a serial or parallel hardwire configurable NC output for signalling to the PLC.
- The safety functions are fixed.
- To aid diagnostics, XPSBAC modules have a serial or parallel hardwire configurable NC output to provide information on the status of the zero speed detection circuit.
- 5 LEDs on the front face provide information on the monitoring circuit status.

Main features	
Start inputs	Automatic, manual & monitored start
Safety inputs	-
Control outputs	1
Safety outputs	4 NO
Diagnostic outputs	2 NC
Connection type	Removable terminal blocks
Terminals	16
Module width	22.5 mm/0.886 in.
Maximum achievable safety level	■ PL e/Category 4 conforming to ISO 13849-1 ■ SILCL 3 conforming to IEC 62061 ■ SIL 3 conforming to IEC 61508
Product certifications	■ cULus ■ TÜV ■ EAC (in progress) ■ CCC (in progress) ■ KC marking (in progress)
Conformity to standards	■ IEC 60947-5-1 ■ IEC 61508-1 (functional safety standard) ■ IEC 61508-2 (functional safety standard) ■ IEC 61508-3 (functional safety standard) ■ ISO 13849-1 (functional safety standard) ■ IEC 62061 (functional safety standard)

References				
Description	Voltage	Terminals mm/in.	References	Weight kg/lb
Type XPSBAC For monitoring E-stop and Guard switch	24 V ∼/ <del></del>	Spring 5.08/0.20	XPSBAC14AC	0.200 <i>0.440</i>
		Screw 5.08/0.20	XPSBAC14AP	0.200 <i>0.440</i>
	48-240 V ∼/ <del></del>	Spring 5.08/0.20	XPSBAC34AC	0.200 0.440
		Screw 5.08/0.20	XPSBAC34AP	0.200 0.440





### **Harmony** XPS

#### Basic safety modules

Type **XPSBAT** for monitoring Emergency stop, Guard switch, Magnetic switch, RFID safety switch and Safety light curtain












#### **Operating principle**

XPSBAT safety modules are used for monitoring Emergency stop circuits conforming to standards EN/ISO 13850 and EN/IEC 60204-1 and also meet the safety requirements for the electrical monitoring of switches in protection devices conforming to standard EN/ISO 14119.

- They provide protective for both the machine operator and the machine by immediately stopping the dangerous movement on receipt of a stop instruction from the operator, or on detection of a fault in the safety circuit itself.
- In addition to the stop category 0 instantaneous opening safety outputs, the modules incorporate 1 stop category 1 time delay output which allows for controlled deceleration of the motor components until a complete stop is achieved (for example, motor braking by variable speed drive). At the end of the preset delay, the supply is disconnected by opening the time delay output circuits.
- The time delay of the 3 output circuits is adjustable between 0 and 15 min (900 s),
- The safety functions and the time delay are selectable and can be configured by selector switches on the front face, while the start function can be wiring configured.
- The Start button monitoring function is configurable depending on the wiring.
- 8 LEDs on the front face provide information on the monitoring circuit status, and aid diagnostics.

Main features	
Start inputs	Automatic, manual & monitored start
Safety inputs	2
Control outputs	3
Safety outputs	2 NO immediate, 1 NO (configurable) 0900 s
Diagnostic outputs	1
Connection type	Removable terminal blocks
Terminals	16
Module width	22.5 mm/0.886 in.
Maximum achievable safety level	<ul> <li>PL e/Category 4 conforming to ISO 13849-1</li> <li>SILCL 3 conforming to IEC 62061</li> <li>SIL 3 conforming to IEC 61508</li> </ul>
Product certifications	<ul> <li>■ cULus</li> <li>■ TÜV</li> <li>■ EAC (in progress)</li> <li>■ CCC (in progress)</li> <li>■ KC marking (in progress)</li> </ul>
Conformity to standards	■ IEC 60947-5-1 ■ IEC 61508-1 (functional safety standard) ■ IEC 61508-2 (functional safety standard) ■ IEC 61508-3 (functional safety standard) ■ ISO 13849-1 (functional safety standard) ■ IEC 62061 (functional safety standard)

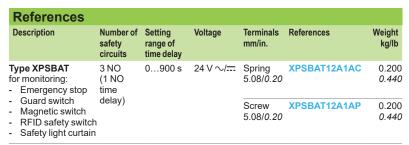





XPSBAT12A1AC XPSBAT12A1

### Operating principle, selection

#### **Harmony** XPS

#### Universal safety modules

Type **XPSUAB**, for monitoring Emergency stop, Antivalent contact, Guard switch, Magnetic switch, Proximity safety switch, PNP sensor, RFID safety switch, Safety light curtain or Two-hand control station















#### **Operating principle**

**XPSUAB** safety modules are designed to monitor two hand control stations IIIA which must comply with International standard ISO 13851. The control stations must be designed and installed so that they cannot be activated involuntarily or easily rendered inoperative. Depending on the application, the requirements of type C standards specific to the machinery involved must be met (additional personal protection methods may have to be considered).

To initiate a dangerous movement, both operators (two-hand control pushbuttons) must be activated within an interval of 0.5 s (synchronous activation). If one of the two pushbuttons is released during a dangerous operation, the control sequence is cancelled. Resuming the dangerous operation is possible only if both pushbuttons are returned to their initial position and reactivated within the required time interval. The safety distance between the control units and the hazardous zone must be enough to ensure that when only one operator is released, the hazardous zone cannot be reached before the dangerous movement has been completed or stopped.

- With automatic, manual & monitored start, **XPSUAB** safety modules are used for monitoring:
- □ A single contact Emergency stop conforming to standard ISO 13850
- □ Switches activated by protection devices conforming to standard ISO 14119:
  - Antivalent contact pair
  - Mechanical guard switch
  - Magnetic switch with Antivalent contact
  - Proximity safety switch with Antivalent contact
  - PNP sensor
  - RFID safety switch
- □ Type 4 light curtains conforming to IEC 61496-1 which have solid-state safety outputs with test function
- With automatic start only, **XPSUAB** safety modules are used for monitoring two-hand control IIIA.
- The safety functions and the start function are selectable and can be configured by selector switches on the front face.
- A solid-state diagnostic output with complete status information facilitates maintenance.
- 6 LEDs on the front face provide information on the monitoring circuit status, and aid diagnostics.

Conforming to ISO 13851

Requirements of standard ISO 13851		Type I	Type II	Type III	Type III		
				Α	В	С	
Standard ISO 13851 defines the selection of two-hand controls	Use of both hands (simultaneous action)						
according to its behavior.  This table details the 3 types of	Link between input and output signals						
two-hand control conforming to ISO 13851.	Prevention of accidental operation						
For each type, it lists the operating characteristics and minimum requirements.	Tamper-proof						
	Output signal reinitialised						
	Synchronous action (specified time limit)						
	Use of proven components (Category 1 conforming to ISO 13849-1)			XPSUAB			
	Redundancy with partial error detection (Category 3 conforming to ISO 13849-1)				XPSUS		
	Redundancy + Self- monitoring (Category 4 conforming to ISO 13849-1)					XPSUS	
	Two-hand control station	XY2SB (1)	•	,	•		

(1) Please consult "Two-hand ergonomic control stations XY2SB" Catalog

Conforming to ISO 13849-1

#### Main features, references

### **Harmony** XPS Universal safety modules

Type **XPSUAB**, for monitoring Emergency stop, Antivalent contact, Guard switch, Magnetic switch, Proximity safety switch, PNP sensor, RFID safety switch, Safety light curtain or Two-hand control station

Main features	
Start inputs	Automatic, manual & monitored start
Safety input	1
Control outputs	2 ON/OFF configurable pulsed outputs
Safety outputs	1 single changeover output
Diagnostic outputs	1 solid state diagnostic output with complete status information
Connection type	Removable terminal blocks
Safe expansion connection	No
Terminals	16
Module width	22.5 mm/0.886 in.
Maximum achievable safety level	<ul> <li>PL c/Category 1 conforming to ISO 13849-1</li> <li>SILCL 1 conforming to IEC 62061</li> <li>SIL 1 conforming to IEC 61508</li> </ul>
Product certifications	■ cULus ■ TÜV ■ EAC ■ CCC ■ KC marking
Conformity to standards	■ IEC 60947-5-1 ■ IEC 61508-1 (functional safety standard) ■ IEC 61508-2 (functional safety standard) ■ IEC 61508-3 (functional safety standard) ■ ISO 13849-1 (functional safety standard) ■ IEC 62061 (functional safety standard)

References				
Description	Voltage	Terminals mm/in.	References	Weight kg/lb
Type XPSUAB for monitoring:  - Emergency stop  - Antivalent contact  - Guard switch  - Magnetic switch  - Proximity safety switch  - PNP sensor  - RFID safety switch  - Safety light curtain  - Two-hand control station	24 V ∼/ <del></del>	Spring 5.08/0.20	XPSUAB11CC	0.200 <i>0.440</i>
		Screw 5.08/0.20	XPSUAB11CP	0.200 <i>0.440</i>
	48-240 V ∼/ <del></del>	Spring 5.08/0.20	XPSUAB31CC	0.200 <i>0.440</i>
		Screw 5.08/0.20	XPSUAB31CP	0.200 0.440





XPSUAB•1CP

#### **Harmony** XPS

#### Universal safety modules

Type **XPSUAF**, for monitoring Emergency stop, Guard switch, Magnetic switch, Proximity safety switch, PNP sensor, RFID safety switch or Safety light curtain













#### **Operating principle**

**XPSUAF** safety modules are used for providing protection for both the machine operator and the machine by immediately stopping the dangerous movement on receipt of a stop instruction from the operator or on detection of an issue in the safety circuit itself.

XPSUAF safety modules are used for monitoring:

- ☐ Emergency stop circuits conforming to standard ISO 13850
- □ Switches activated by protection devices conforming to standard ISO 14119:
  - Mechanical guard switches
  - Magnetic switch with antivalent or 2 NC contacts
  - Proximity safety switch with Antivalent contact
  - PNP sensor
  - RFID safety switch
- $\hfill \square$  Type 4 light curtains conforming to IEC 61496-1 having solid-state safety outputs with test function
- The safety functions and the start function are selectable and can be configured by selector switches on the front face.
- A solid-state diagnostic output with complete status information facilitates maintenance.
- To monitor a higher number of Antivalent contacts using this safety module, the Antivalent contact can be connected with a NC in series and NO in parallel.
- 6 LEDs on the front face provide information on the monitoring circuit status, and aid diagnostics.

Main features	
Start inputs	Automatic, manual & monitored start
Safety inputs	2
Control outputs	3 ON/OFF configurable pulsed outputs
Safety outputs	3 NO
Diagnostic outputs	1 solid state diagnostic output with complete status information
Connection type	Removable terminal blocks
Safe expansion connection	Yes
Terminals	16
Module width	22.5 mm/0.886 in.
Maximum achievable safety level	<ul> <li>PL e/Category 4 conforming to ISO 13849-1</li> <li>SILC L 3 conforming to IEC 62061</li> <li>SIL 3 conforming to IEC 61508</li> </ul>
Product certifications	■ cULus ■ TÜV ■ EAC ■ CCC ■ KC marking
Conformity to standards	■ IEC 60947-5-1 ■ IEC 61508-1 (functional safety standard) ■ IEC 61508-2 (functional safety standard) ■ IEC 61508-3 (functional safety standard) ■ ISO 13849-1 (functional safety standard) ■ IEC 62061 (functional safety standard)
Deferences	





XPSUAF•3AP

References Description	Voltage	Terminals	References	Weight
		mm/in.		kg/lb
Type XPSUAF for monitoring:  Emergency stop  Guard switch  Magnetic switch  Proximity safety switch  PNP sensor  RFID safety switch  Safety light curtain	24 V ∼/ <del></del>	Spring 5.08/0.20	XPSUAF13AC	0.200 <i>0.440</i>
		Screw 5.08/0.20	XPSUAF13AP	0.200 <i>0.440</i>
	48-240 V ∼/ <del></del>	Spring 5.08/0.20	XPSUAF33AC	0.200 0.440
		Screw 5.08/0.20	XPSUAF33AP	0.200 <i>0.440</i>

#### **Harmony** XPS

#### Universal safety modules

Type **XPSUAK**, for monitoring Emergency stop, Guard switch, Magnetic switch, Proximity safety switch, PNP & NPN sensors, RFID safety switch, Safety light curtain or Sensing mat/edge
















#### **Operating principle**

**XPSUAK** safety modules provide protection for both the machine operator and the machine by immediately stopping the dangerous movement on receipt of a stop instruction from the operator or on detection of an issue in the safety circuit itself.

XPSUAK safety modules are used for monitoring:

- ☐ Emergency stop circuits conforming to standard ISO 13850
- □ Switches activated by protection devices conforming to standard ISO 14119:
  - Mechanical guard switches
  - Magnetic switch with antivalent or 2 NC contacts
  - Proximity safety switch with Antivalent contact
  - Sensor pair
  - 1 PNP + 1 NPN sensor
  - RFID safety switch
- □ Type 4 light curtains conforming to IEC 61496-1 having solid-state safety outputs with test function
- □ 4-wire sensing mats or edges conforming to ISO 13856
- The safety functions and the start function are selectable and can be configured by selector switches on the front face.
- A solid-state diagnostic output with complete status information facilitates maintenance.
- To monitor a higher number of Antivalent contacts using this safety module, the Antivalent contact can be connected with a NC in series and NO in parallel.
- 6 LEDs on the front face provide information on the monitoring circuit status, and aid diagnostics.

Main features	
Start inputs	Automatic, manual & monitored start
Safety inputs	2
Control outputs	3 ON/OFF configurable pulsed outputs
Safety outputs	2 NO + 1 NC
Diagnostic outputs	1 solid state diagnostic output with complete status information
Connection type	Removable terminal blocks
Safe expansion connection	Yes
Terminals	20
Module width	22.5 mm/0.886 in.
Maximum achievable safety level	<ul> <li>PL e/Category 4 conforming to ISO 13849-1</li> <li>SILC L 3 conforming to IEC 62061</li> <li>SIL 3 conforming to IEC 61508</li> </ul>
Product certifications	■ cULus ■ TÜV ■ EAC ■ CCC ■ KC marking
Conformity to standards	■ IEC 60947-5-1 ■ IEC 61508-1 (functional safety standard) ■ IEC 61508-2 (functional safety standard) ■ IEC 61508-3 (functional safety standard) ■ ISO 13849-1 (functional safety standard) ■ IEC 62061 (functional safety standard)

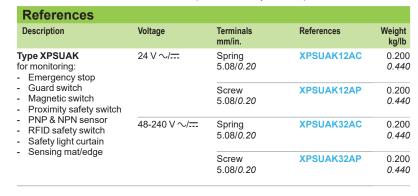





XPSUAK•2AC

XPSUAK•2AP

#### **Harmony** XPS

#### Universal safety modules

Type **XPSUAT**, for monitoring Emergency stop, Guard switch, Magnetic switch, Proximity safety switch, PNP & NPN sensor, RFID safety switch, Safety light curtain or Sensing mat/edge
















#### Operating principle

**XPSUAT** safety modules provide protection for both the operator and the machine by immediately stopping the dangerous movement on receipt of a stop instruction from the operator, or on detection of an issue in the safety circuit itself.

XPSUAT safety modules are used for monitoring:

- □ Emergency stop circuits conforming to standard ISO 13850.
- □ Switches activated by protection devices conforming to standard ISO 14119:
  - Mechanical guard switches
  - Magnetic switch with antivalent or 2 NC contacts
  - Proximity safety switch with Antivalent contact
  - PNP Sensor
  - 1 PNP + 1 NPN Sensor
  - RFID safety switch
- $\hfill\Box$  Type 4 light curtains conforming to IEC 61496-1 having solid-state safety outputs with test function.
- □ 4-wire sensing mats or edges conforming to ISO 13856.
- □ In addition to the stop category 0 instantaneous opening safety outputs, the **XPSUAT** safety modules incorporate stop category 1 time delay outputs which allow controlled deceleration of the motor to a complete stop (for example, motor braking by variable speed drive). At the end of the preset delay, the supply is disconnected by opening the time delayed output circuits. Also the time delay from 0 s to 15 min (900 s) can be selected by selector switches on the front face.
- The safety functions and the start function are selectable and can be configured by selector switches on the front face.
- A solid-state diagnostic output with complete status information facilitates maintenance.
- To monitor a higher number of Antivalent contacts using this safety module, the Antivalent contact can be connected with a NC in series and NO in parallel.
- 8 LEDs on the front face provide information on the monitoring circuit status, and aid diagnostics.

ara aragireer	
Main features	
Start inputs	Automatic, manual & monitored start
Safety inputs	2 positive safety inputs 24 VDC, 1 negative safety input
Control outputs	4 ON/OFF configurable pulsed outputs
Safety outputs	3 NO immediate + 3 NO configurable + 1 NC configurable
Diagnostic outputs	<ul> <li>1 solid state diagnostic output for time delay ending</li> <li>1 solid state diagnostic output with complete status information</li> </ul>
Connection type	Removable terminal blocks
Safe expansion connection	Yes
Terminals	27
Module width	45 mm/1.77 in.
Time delay setting	0 s to 15 min. The delay is configured with the delay base selector and the delay factor selector
Maximum achievable	■ PL e/Category 4 conforming to ISO 13849-1
safety level	■ SILCL 3 conforming to IEC 62061
	■ SIL 3 conforming to IEC 61508
Product certifications	■ cULus
	■ TÜV ■ EAC
	■ CCC
	■ KC marking
Conformity to standards	■ IEC 60947-5-1 ■ IEC 61508-1 (functional safety standard) ■ IEC 61508-2 (functional safety standard) ■ IEC 61508-3 (functional safety standard)
	<ul><li>■ ISO 13849-1 (functional safety standard)</li><li>■ IEC 62061 (functional safety standard)</li></ul>

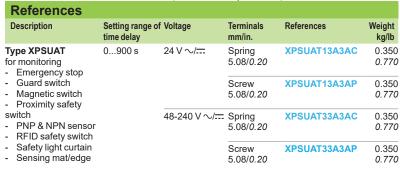





#### **Harmony** XPS

#### Universal safety modules

Type **XPSUDN**, for monitoring Emergency stop, Guard switch, Magnetic switch, Proximity safety switch, PNP sensor, RFID safety switch or safety light curtain













#### **Operating principle**


XPSUDN safety modules are used for monitoring:

- □ Emergency stop circuits conforming to standard ISO 13850
- □ Switches activated by protection devices conforming to standard ISO 14119:
  - Mechanical guard switches
  - Magnetic switch with antivalent or 2 NC contacts
  - Proximity safety switch with Antivalent contact
  - PNP Sensor
  - RFID safety switch

 $\hfill \Box$  Type 4 light curtains conforming to IEC 61496-1 having solid-state safety outputs with test function

- The safety functions and the start function are selectable and can be configured by selector switches on the front face.
- A solid-state diagnostic output with complete status information facilitates maintenance.
- To monitor a higher number of Antivalent contacts using this safety module, the Antivalent contact can be connected with a NC in series and NO in parallel.
- 16 LEDs on the front face provide information on the monitoring circuit status, and aid diagnostics.

Main features						
Start inputs	Automatic, manual & monitored start					
Safety inputs	6					
Control outputs	7 ON/OFF configurable pulsed outputs					
Safety outputs	3 NO + 1 NC					
Diagnostic outputs	1 solid-state diagnostic output with complete status information					
Connection type	Removable terminal blocks					
Safe expansion connection	Yes					
Terminals	32					
Module width	45 mm /1.77 in.					
Maximum achievable safety level	<ul> <li>PL e/Category 4 conforming to ISO 13849-1</li> <li>SILCL 3 conforming to IEC 62061</li> <li>SIL 3 conforming to IEC 61508</li> </ul>					
Product certifications	■ cULus ■ TÜV ■ EAC ■ CCC ■ KC marking					
Conformity to standards	■ IEC 60947-5-1 ■ IEC 61508-1 (functional safety standard) ■ IEC 61508-2 (functional safety standard) ■ IEC 61508-3 (functional safety standard) ■ ISO 13849-1 (functional safety standard) ■ IEC 62061 (functional safety standard)					

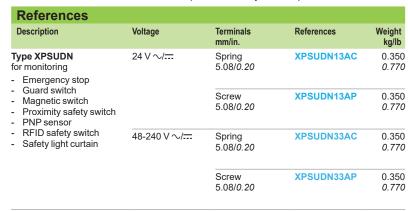





XPSUDN•3AP

### Operating principle, selection

#### **Harmony** XPS

#### Universal safety modules

**Type XPSUS**, for monitoring Emergency stop, Guard switch, Magnetic switch, Proximity safety switch, PNP sensor, RFID safety switch, Safety light curtain, Two-hand control station or Enabling switch

















#### **Operating principle**

**XPSUS** safety modules are designed to monitor two hand control stations IIIA or IIIC which must comply with International standard ISO 13851. The control stations must be designed and installed so that they cannot be activated involuntarily or easily rendered inoperative. Depending on the application, the requirements of type C standards specific to the machinery involved must be met (additional personal protection methods may have to be considered).

To initiate a dangerous movement, both operators (two-hand control pushbuttons) must be activated within an interval of 0.5 s (synchronous activation). If one of the two pushbuttons is released during a dangerous operation, the control sequence is cancelled. Resuming the dangerous operation is possible only if both pushbuttons are returned to their initial position and reactivated within the required time interval. The safety distance between the control units and the hazardous zone must be enough to ensure that when only one operator is released, the hazardous zone cannot be reached before the dangerous movement has been completed or stopped.

- With automatic, manual & monitored start, **XPSUS** safety modules are used for monitoring:
- 2 Emergency stop circuits conforming to standard ISO 13850
- □ Switches activated by protection devices conforming to standard ISO 14119:
  - 2 mechanical guard switches
  - 2 magnetic switches with Antivalent contact or 2 NC contacts
  - 2 proximity safety switches with Antivalent contact
  - 2 independent PNP sensors
  - 2 RFID safety switches
- $\hfill\Box$  Type 4 light curtains conforming to IEC 61496-1 having solid-state safety outputs with test function
- With automatic start only, **XPSUS** safety modules are used for monitoring one two-hand control IIIA, IIIC or enabling switch.
- The safety functions and the start function are selectable and can be configured by selector switches on the front face.
- A solid-state diagnostic output with complete status information facilitates maintenance.
- To monitor a higher number of Antivalent contacts using these safety modules, the Antivalent contact can be connected with a NC in series and NO in parallel.
- 8 LEDs on the front face provide information on the monitoring circuit status, and aid diagnostics.

Selection						
Requirements of standard ISO 13851		Type I	Type II	Type III		
				Α	В	С
Standard ISO 13851 defines the selection of two-hand controls	Use of both hands (simultaneous action)					
according to its behavior.	Link between input and output signals					
This table details the 3 types of two-hand control conforming to ISO 13851.	Prevention of accidental operation					
For each type, it lists the operating characteristics and	Tamper-proof					
minimum requirements.	Output signal reinitialised					
	Synchronous action (specified time limit)					
	Use of proven components (Category 1 conforming to ISO 13849-1)			XPSUAB		
	Redundancy with partial error detection (Category 3 conforming to ISO 13849-1)				XPSUS	
	Redundancy + Self-monitoring (Category 4 conforming to ISO 13849-1)					XPSUS
	Two-hand control station	XY2SB (	1)			
Conforming to I	SO 13849-1		Conform	ing to ISO	13851	

(1) Please consult "Two-hand ergonomic control stations XY2SB" Catalog.

#### Main features, references

### **Harmony** XPS Universal safety modules

Type **XPSUS**, for monitoring Emergency stop, Guard switch, Magnetic switch, Proximity safety switch, PNP sensor, RFID safety switch, Safety light curtain, Two-hand control station or Enabling switch

Main features						
Start inputs	Automatic, manual & monitored start					
Safety inputs	2					
Control outputs	3 ON/OFF configurable pulsed outputs					
Safety outputs	2 NO					
Diagnostic outputs	1 solid-state diagnostic output with complete status information					
Connection type	Removable terminal blocks					
Safe expansion connection	Yes					
Terminals	16					
Module width	22.5 mm/0.886 in.					
Maximum achievable safety level	■ PL e/Category 4 conforming to ISO 13849-1 ■ SILCL 3 conforming to IEC 62061 ■ SIL 3 conforming to IEC 61508					
Product certifications	■ cULus ■ TÜV ■ EAC ■ CCC ■ KC marking					
Conformity to standards	■ IEC 60947-5-1 ■ IEC 61508-1 (functional safety standard) ■ IEC 61508-2 (functional safety standard) ■ IEC 61508-3 (functional safety standard) ■ ISO 13849-1 (functional safety standard) ■ IEC 62061 (functional safety standard)					





References				
Description	Voltage	Terminals mm/in.	References	Weight kg/lb
Type XPSUS for monitoring:  Emergency stop  Guard switch  Magnetic switch  Proximity safety switch  PNP sensor  RFID safety switch  Safety light curtain  Two-hand control station  Enabling switch	24 V ∼/ <del></del>	Spring 5.08/0.20	XPSUS12AC	0.200 <i>0.440</i>
		Screw 5.08/0.20	XPSUS12AP	0.200 0.440
	48-240 V ∼/ <del></del>	Spring 5.08/0.20	XPSUS32AC	0.200 <i>0.440</i>
		Screw 5.08/0.20	XPSUS32AP	0.200 0.440

#### **Harmony** XPS

#### Universal safety modules

Type **XPSUEP**, for Extending the number of safety contacts



#### **Operating principle**

**XPSUEP** safety modules are used for extending the number of safety output contacts of XPS Universal safety modules.

**XPSUEP** are available as additions to base modules (Emergency stop, limit switch, two-hand control, etc.).

XPSUEP can be only used with XPSUAF, XPSUAK, XPSUAT, XPSUDN and XPSUS safety modules. When XPSUAT is the base module for instance, its configuration is used to choose whether the XPSUEP's outputs follow XPSUAT's immediate or time delayed outputs.

 3 LEDs on the front face provide information on the monitoring circuit status, and aid diagnostics.

Main features	
Start input	Follows the host module
Safety inputs	0, Extension bus
Safety outputs	4 NO + 2 single NC
Connection	Connection to base module by connector
Diagnostic outputs	1 solid-state diagnostic output with complete status information
Connection type	Removable terminal blocks
Terminals	16
Module width	22.5 mm/0.886 in.
Maximum achievable safety level	■ PL e/Category 4 conforming to ISO 13849-1 ■ SILCL 3 conforming to IEC 62061 ■ SIL 3 conforming to IEC 61508
Product certifications	■ cULus ■ TÜV ■ EAC ■ CCC ■ KC marking
Conformity to standards	■ IEC 60947-5-1 ■ IEC 61508-1 (functional safety standard) ■ IEC 61508-2 (functional safety standard) ■ IEC 61508-3 (functional safety standard) ■ ISO 13849-1 (functional safety standard) ■ IEC 62061 (functional safety standard)





References					
Description	Compatible with	Voltage	Terminals mm/in.	References	Weight kg/lb
Type XPSUEP For Extending the number of safety contacts	XPSUAF XPSUAK XPSUAT XPSUDN XPSUS	24 V ∼/ <del></del>	Spring 5.08/0.20	XPSUEP14AC	0.200 <i>0.440</i>
			Screw 5.08/0.20	XPSUEP14AP	0.200 0.440
		48-240 V ~/ <del></del>	Spring 5.08/0.20	XPSUEP34AC	0.200 0.440
			Screw 5.08/0.20	XPSUEP34AP	0.200 0.440

#### **Harmony** XPS

#### Universal safety modules

Type XPSUVN, for Zero speed monitoring with delayed access to dangerous area





#### **Operating principle**

**XPSUVN** is a safety module for interruption of safety-related electrical circuits. XPSUVN provides for sensorless standstill monitoring of a motor, and measures the residual voltage that is generated by remanent magnetization after power to the motor is removed and while it coasts down. The voltage is measured via an analog voltage measuring input to determine when standstill has actually been reached. This can be used to implement a safety related function such as controlling an interlocking device with guard locking.

The following types of motors which generate a measurable residual voltage when coasting down after power supply has been removed can be connected to the safety-related input of the device:

- □ Three-phase AC motors
- □ Single-phase AC motors
- □ DC motors
- ☐ Three-phase AC motors with star-delta wiring

XPSUVN safety module can monitor motors that are operated via mains as well as motors that are controlled by electronic motor control equipment such as frequency

In addition, XPSUVN safety module uses an adjustable activation delay. The activation delay is the period between the point in time at which the measured voltage drops below the adjusted voltage threshold and the point in time at which activation of the safety-related outputs is triggered;

- The Voltage threshold and the Activation delay can be configured by selector switches on front face
- To aid diagnostics, XPSUVN modules have 2 solid-state outputs to provide information on the status of the zero speed detection circuit
- 5 LEDs on the front face provide information on the monitoring circuit status, and aid diagnostics.

Main features	
Start input	Automatic
Safety inputs	3
Control outputs	-
Safety outputs	1 NO (configurable) 0,560 s
Diagnostic outputs	2
Connection type	Removable terminal blocks
Safe expansion connection	Yes
Terminals	16
Module width	22.5 mm/0.886 in.
Time delay setting	0.5 s, 1 s, 2 s, 3 s, 5 s, 8 s, 12 s, 20 s, 35 s, 60 s
Voltage threshold selector:	50500 mV
Maximum achievable safety level	<ul> <li>PL e/Category 3 conforming to ISO 13849-1</li> <li>SILCL 3 conforming to IEC 62061</li> <li>SIL 3 conforming to IEC 61508</li> </ul>
Product certifications	<ul> <li>cULus</li> <li>TÜV</li> <li>EAC (in progress)</li> <li>CCC (in progress)</li> <li>KC marking (in progress)</li> </ul>
Conformity to standards	■ IEC 60947-5-1 ■ IEC 61508-1 (functional safety standard) ■ IEC 61508-2 (functional safety standard) ■ IEC 61508-3 (functional safety standard) ■ ISO 13849-1 (functional safety standard) ■ IEC 62061 (functional safety standard)





XPSUVN•1AF

References					
Description	Setting range of time delay	Voltage	Terminals mm/in.	References	Weight kg/lb
Type XPSUVN For zero speed monitoring with delayed access to dangerous	0.560 s	24 V ∼/ <del></del>	Spring 5.08/0.20	XPSUVN11AC	0.200 <i>0.440</i>
			Screw 5.08/0.20	XPSUVN11AP	0.200 0.440
area		48-240 V ∼/ <del></del>	Spring 5.08/0.20	XPSUVN31AC	0.200 0.440
			Screw 5.08/0.20	XPSUVN31AP	0.200 <i>0.440</i>

#### **Harmony** XPS Basic & Universal Safety Modules

Accessories



XPSEC is a set of plastic coding elements for terminal blocks

References			
Description	Use for	Unit reference	Weight kg/lb
Terminal block coding bit	XPS Basic & Universal Safety Modules	XPSEC Sold in lot of 30	0.010/ <i>0.020</i>



#### Presentation

**XPSES** is a set of uniquely numbered sealing strips used to seal the transparent front cover flap of any XPS Universal and Basic safety module to prevent operator or maintenance to change the configuration.





#### **Harmony** XPS Basic & Universal Safety Modules

Substitution table

Preventa XPS Safety modules (end	of commercialization)	Harmony XPS Basic sa	afety mo	dules (new)	
Reference		Reference		Comment	Additional comment
XPSABV11330C	1.530 sec delay, only	XPSBAT12A1AC	-	Direct replacement	0900 sec delay
XPSABV11330P	potential free inputs	XPSBAT12A1AP	-	Direct replacement	
(PSABV1133C	0.153 sec delay, only	XPSBAT12A1AC	-	Direct replacement	
(PSABV1133P	potential free inputs	XPSBAT12A1AP	-	Direct replacement	
(PSAC1321	3 NO output	XPSBAC34AP	-	Direct replacement	4 NO + 2 NC output
(PSAC1321P	3 NO output	XPSBAC34AP	-	Direct replacement	
(PSAC3421	3 NO output	XPSBAC34AP	-	Direct replacement	
PSAC3421P	3 NO output	XPSBAC34AP	-	Direct replacement	
PSAC3721	3 NO output	XPSBAC34AP	-	Direct replacement	
PSAC3721P	3 NO output	XPSBAC34AP	-	Direct replacement	
PSAC5121	3 NO output	XPSBAC14AP	-	Direct replacement	
PSAC5121P	3 NO output	XPSBAC14AP	-	Direct replacement	
PSAXE5120C	3 NO + 1 NC output	XPSBAC14AC	-	Direct replacement	
PSAXE5120P	3 NO + 1 NC output	XPSBAC14AP	-	Direct replacement	
PSAFL5130	-	XPSUAF13AP	-	Direct replacement	-
PSAFL5130P	-	XPSUAF13AP	-	Direct replacement	-
PSAK311144	-	XPSUAK12AP	-	Direct replacement	XPSUAK have 1 NO less than XPSAK
PSAK311144P	-	XPSUAK12AP	-	Direct replacement	XPSUAK have 1 NO less than XPSAK
PSAK331144P	-	XPSUAK32AP	-	Direct replacement	XPSUAK have 1 NO less than XPSAK
PSAK351144	-	XPSUAK32AP	-	Direct replacement	XPSUAK have 1 NO less than XPSAK
PSAK351144P	-	XPSUAK32AP	-	Direct replacement	XPSUAK have 1 NO less than XPSAK
PSAK361144	-	XPSUAK32AP	-	Direct replacement	XPSUAK have 1 NO less than XPSAK
PSAK361144P	-	XPSUAK32AP	-	Direct replacement	XPSUAK have 1 NO less than XPSAK
PSAK371144	-	XPSUAK32AP	-	Direct replacement	XPSUAK have 1 NO less than XPSAK
PSAK371144P	-	XPSUAK32AP	-	Direct replacement	XPSUAK have 1 NO less than XPSAK
PSAR311144	Global group 1	XPSUAT13A3AP	1	OR	If max. 6 NO are used
PSAR311144	Global group 1	XPSUAF13AP	1	AND	If all 7 NO are used
PSAR311144	Global group 1	XPSUEP14AP	1		
PSAR311144P	Global group 2	XPSUAT13A3AP	2	OR	If max. 6 NO are used
(PSAR311144P	Global group 2	XPSUAF13AP	2	AND	If all 7 NO are used
PSAR311144P	Global group 2	XPSUEP14AP	2		
PSAR351144	Global group 3	XPSUAT33A3AP	3	OR	If max. 6 NO are used
PSAR351144	Global group 3	XPSUAF33AP	3	AND	If all 7 NO are used
PSAR351144	Global group 3	XPSUEP14AP	3		
PSAR351144P	Global group 4	XPSUAT33A3AP	4	OR	If max. 6 NO are used
PSAR351144P	Global group 4	XPSUAF33AP	4	AND	If all 7 NO are used
PSAR351144P	Global group 4	XPSUEP14AP	4		
PSAR371144	Global group 5	XPSUAT33A3AP	5	OR	If max. 6 NO are used
PSAR371144	Global group 5	XPSUAF33AP	5	AND	If all 7 NO are used
PSAR371144	Global group 5	XPSUEP14AP	5		
(PSAR371144P	Global group 6	XPSUAT33A3AP	6	OR	If max. 6 NO are used
(PSAR371144P	Global group 6	XPSUAF33AP	6	AND	If all 7 NO are used
(PSAR371144P	Global group 6	XPSUEP14AP	6		

#### **Harmony** XPS Universal Safety Modules

Substitution table (Continued)

Preventa XPS Safety modules (end	of commercialization)	Harmony XPS Univers	al safety m	odules (new)	
Reference	,	Reference	Group	Comment	Additional comment
(PSATE3410		XPSUAT33A3AP	-	Direct replacement	-
(PSATE3410P		XPSUAT33A3AP	-	Direct replacement	-
PSATE3710		XPSUAT33A3AP	-	Direct replacement	-
PSATE3710P		XPSUAT33A3AP	-	Direct replacement	-
PSATE5110		XPSUAT13A3AP	-	Direct replacement	-
PSATE5110P		XPSUAT13A3AP	-	Direct replacement	-
PSATR11530C		XPSUAT13A3AC	-	Direct replacement	-
PSATR11530P		XPSUAT13A3AP	-	Direct replacement	-
PSATR1153C		XPSUAT13A3AC	-	Direct replacement	-
PSATR1153P		XPSUAT13A3AP	-	Direct replacement	-
PSATR39530C		XPSUAT33A3AC	-	Direct replacement	-
PSATR39530P		XPSUAT33A3AP	-	Direct replacement	-
PSATR3953C		XPSUAT33A3AC	-	Direct replacement	-
PSATR3953P		XPSUAT33A3AP	-	Direct replacement	-
PSAV11113		XPSUAT13A3AP	-	Direct replacement	-
PSAV11113P		XPSUAT13A3AP	-	Direct replacement	-
PSAV11113T050		XPSUAT13A3AP	-	Direct replacement	-
PSAV11113Z002		XPSUAT13A3AP	-	Direct replacement	-
PSBAE3920C		XPSUAB31CC	_	Direct replacement	_
PSBAE3920P		XPSUAB31CP	_	Direct replacement	-
PSBAE5120C		XPSUAB11CC	_	Direct replacement	
PSBAE5120P		XPSUAB11CP	_	Direct replacement	_
PSBCE3110C		XPSUS12AC	_	Direct replacement	
PSBCE3110P		XPSUS12AP		Direct replacement	
		XPSUS32AC		<u> </u>	
PSBCE3410C			-	Direct replacement	-
PSBCE3410P		XPSUS32AP	-	Direct replacement	•
PSBCE3710C		XPSUS32AC	-	Direct replacement	-
PSBCE3710P		XPSUS32AP	-	Direct replacement	-
PSBF1132		XPSUS12AP	-	Direct replacement	-
PSBF1132P		XPSUS12AP	-	Direct replacement	-
PSDMB1132		XPSUS12AP	-	Direct replacement	-
PSDMB1132P		XPSUS12AP	-	Direct replacement	-
PSDME1132		XPSUDN13AP	-	Direct replacement	-
PSDME1132P		XPSUDN13AP	-	Direct replacement	-
PSDME1132TS220		XPSUDN13AP	-	Direct replacement	-
PSECME5120C		XPSUEP14AC	-	Indirect replacement	Only in combination with XPSU host
PSECME5120P		XPSUEP14AP	-	Indirect replacement	Only in combination with XPSU host
PSECME5131C		XPSUEP14AC	-	Indirect replacement	Only in combination with XPSU host
PSECME5131P		XPSUEP14AP	-	Indirect replacement	Only in combination with XPSU host
PSVC1132		XPSUS12AP	-	Direct replacement	-
PSVC1132P		XPSUS12AP	-	Direct replacement	-
PSVNE1142HSP	No time delay included (must be	XPSUVN11AP	-	Time delay included + 2 variants	
PSVNE1142LFP	implemented with another device)	XPSUVN11AP	-	<ul> <li>for different supply voltages, no variants for different frequency</li> </ul>	
PSVNE1142P	+ 3 variants for different supply	XPSUVN11AP	-	ranges	
PSVNE3442HSP	voltages + 3 variants for different	XPSUVN31AP	-	_	
PSVNE3442LFP	frequency ranges	XPSUVN31AP	-	_	
PSVNE3442P		XPSUVN31AP	-	_	
PSVNE3742HSP		XPSUVN31AP	_	_	
(PSVNE3742P		7.1 COTITOTAL		_	

### **Harmony** XPS Basic & Universal Safety Modules

Product reference index

X	
XPSABV1133C	18
XPSABV1133P	18
XPSABV11330C	18
XPSABV11330P	18
XPSAC1321	18
XPSAC1321P	18
XPSAC3421	18
XPSAC3421P	18
XPSAC3721	18
XPSAC3721P	18
XPSAC5121	18
XPSAC5121P	18
XPSAFL5130	18
XPSAFL5130P	18
XPSAK311144	18
XPSAK311144P	18
XPSAK331144P	18
XPSAK351144	18
XPSAK351144P	18
XPSAK361144	18
XPSAK361144P	18
XPSAK371144	18
XPSAK371144P	18
XPSAR311144	18
XPSAR311144P	18
XPSAR351144	18
XPSAR351144P	18
XPSAR371144	18
XPSAR371144P	18
XPSATE3410	19
XPSATE3410P	19
XPSATE3710	19
XPSATE3710P	19
XPSATE5110	19
XPSATE5110P	19
XPSATR1153C	19
XPSATR1153P	19
XPSATR3953C	19
XPSATR3953P	19
XPSATR11530C	19
XPSATR11530P	19
XPSATR39530C	19
XPSATR39530P	19
XPSAV11113	19
XPSAV11113P	19
XPSAV11113T050	19
XPSAV11113Z002	19
XPSAXE5120C	18
XPSAXE5120P	18
XPSBAC14AC	5
	18
XPSBAC14AP	5 18
XPSBAC34AC	5
XPSBAC34AP	
AI JUMUJ4AF	18
XPSBAE3920C	19
XPSBAE3920P	19
XPSBAE5120C	19
XPSBAE5120P	19
XPSBAT12A1AC	6
	18

XPSBAT12A1AP	6 18
XPSBCE3110C	19
XPSBCE3110P	19
XPSBCE3410C	19
XPSBCE3410P	19
XPSBCE3710C	19
XPSBCE3710P	19
XPSBF1132 XPSBF1132P	19 19
XPSDMB1132	19
XPSDMB1132P	19
XPSDME1132	19
XPSDME1132P	19
XPSDME1132TS220	19
XPSEC	17
XPSECME5120C	19
XPSECME5120P	19
XPSECME5131C XPSECME5131P	19 19
XPSES	17
XPSUAB11CC	8
XPSUAB11CP	19
	19
XPSUAB31CC	8 19
XPSUAB31CP	8 19
XPSUAF13AC	9
XPSUAF13AP	9 18
XPSUAF33AC	9
XPSUAF33AP	9 18
XPSUAK12AC	10
XPSUAK12AP	10
VPOLIA KOSA S	18
XPSUAK32AC XPSUAK32AP	10
	18
XPSUAT13A3AC	11 19
XPSUAT13A3AP	11 18 19
XPSUAT33A3AC	11 19
XPSUAT33A3AP	11
	18 19
XPSUDN13AC	12
XPSUDN13AP	12 19
XPSUDN33AC	12
XPSUDN33AP	12
XPSUEP14AC	15
V5011501115	19
XPSUEP14AP	15 18
	19
XPSUEP34AC	15
XPSUEP34AP	15
XPSUS12AC	14 19
XPSUS12AP	14
XPSUS32AC	19 14
	19

XPSUS32AP	14 19
XPSUVN11AC	16
XPSUVN11AP	16
	19
XPSUVN31AC	16
XPSUVN31AP	16
	19
XPSVC1132	19
XPSVC1132P	19
XPSVNE1142HSP	19
XPSVNE1142LFP	19
XPSVNE1142P	19
XPSVNE3442HSP	19
XPSVNE3442LFP	19
XPSVNE3442P	19
XPSVNE3742HSP	19
XPSVNE3742P	19





### Learn more about our products at <a href="https://www.se.com">www.se.com</a>

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein.

Design: Schneider Electric Photos: Schneider Electric

#### **Schneider Electric Industries SAS**

Head Office 35, rue Joseph Monier - CS 30323 F-92500 Rueil-Malmaison Cedex France